

1. Horizontal adjustment: Remove set screw on back side of hinge using 3mm hex key. Remove cover by sliding it away from the hinge pin. Use a 5mm hex key to turn the horizontal adjustment screw.



2. Vertical adjustment: Use a 5mm hex key to turn the screw from the bottom of the hinge.



3. Pressure adjustment: Remove the cap from the top of the hinge. Use an 8mm hex key to turn the plastic insert to increase/decrease the pressure on the door seals.

